



Replacing the Square-ring chicken loop with a new "V"-ring chicken loop

New chicken loops will have a "V" shape metal ring. This is to replace the former square-shaped ring, shown in the photo here, on top.

Helpful Tools:

- Needle nose or square nose pliers
- North Kites supplied accessory kit



Pull Iron Heart to release chicken loop.



Use needle nose or blunt nose pliers to crimp eye of cotter pin.



Pull cotter pin through the other side and out.



Pull out washer pin and the chicken loop will completely disassemble from the Iron Heart.



Hold back Iron Heart with one hand while inserting chicken loop end with the other.



Insert washer pin.




TIP: To free a hand for the remaining steps, stand up Iron Heart Pin against Iron Heart to keep it from springing up.



Insert cotter pin through washer pin hole.



With pliers, bend cotter pin ends backwards and back around washer pin.

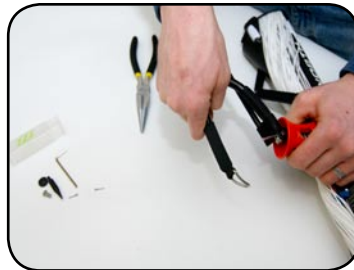

Continuing to pull back Iron Heart, re-attach chicken loop into Iron Heart as shown.



Secure chicken loop back into place by inserting Iron Heart pin through "V" ring and into the Iron Heart.



Finished as shown!